



### THE BOX

Taurus QR code  
Manual QR code  
Product code  
Product name

### INSIDE THE BOX

- 1 x Wireless Remote Indicator
- 2 x CR123A batteries  
Batteries not included for item code TAU-RI-01/NB
- 2 x Screws
- 1 x Quick start guide
- 1 x QR code

Available also without batteries: TAU-RI-01/NB



### IMPORTANT TO CONSIDER

When mounting a wireless device a comprehensive radio survey should have been carried out to establish the location that provides the best coverage and optimum reach. Taking into consideration the building structure and materials, the survey identifies the wireless infrastructure required and product locations for optimum performance, identifying any factor that could prevent radio integrity.

Avoid fixing or mounting the unit close to the following:

- Equipment that utilises large electrical currents
- Large metal objects or structures
- Fluorescent lighting fittings
- Metal ceiling structures
- IT cabling.

Keep 2 meters minimum spacing between other wireless equipment in the area to avoid signal interference.



EN54 approved environmental temperature range is -10°C to +55°C

### UNBOXING


- When unboxing the Wireless Remote Indicator you will find the unit and its back box.
- This comes with pre-formed mounting holes to ensure ease of drilling.
- 2 screws are supplied to fix the back box to the wall.

For more information, please refer to the complete product manual.

### MOUNTING STEPS


Proceed as follows to complete the device installation. This applies to the first power on, otherwise refer to the installation manual.

1

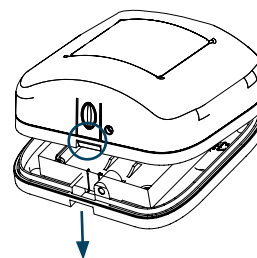

Remove the Wireless Remote Indicator front from the back box pressing the "unlock" button.


2

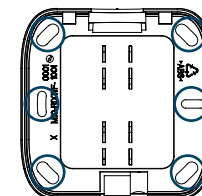

#### AVAILABLE MOUNTING HOLES


- Locate the mounting holes on the back box and mark them using a pencil on the desired surface you are drilling.
- Using a suitable-sized drill bit (5.5mm) drill the marked screw points on your chosen surface.
- Ensure you use the correct fixings for the type of surface you are mounting to.

3

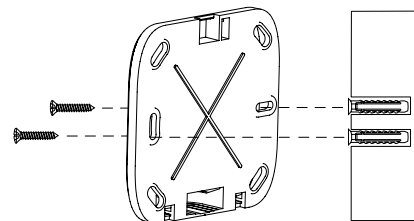


Screw the back box to the wall using all fixing holes and the supplied screws.

4

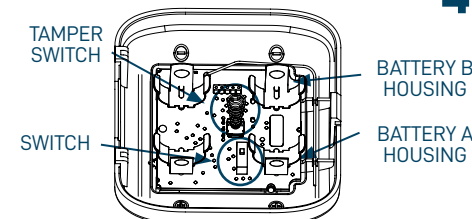


- Ensure the programming switch on the remote indicator is in position 1.
- Fit the 2x CR123A batteries ensuring you have checked they are the correct way round observing the polarity indications.

5

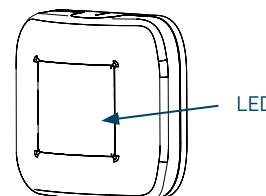

- Observe the status LED on the front of the remote indicator: it will blink alternatively green / red 4 times.

6

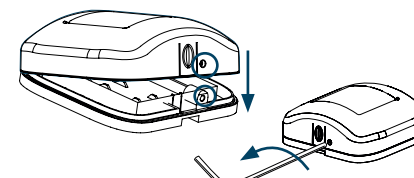

- Refit the remote indicator to the back box, hooking it up from the top and pushing it towards the back box.
- Optional: use an allen key to provide mechanical tamper functionality.
- Put the QR code available in the box either on the system map or on the dedicated pages at the end of translator or expander manual.